

THE ***RUNNER***®

TIP SET REPLACEMENT


US AND FOREIGN PATENTS PENDING



REPLACEMENT PARTS INSTALLATION GUIDE



1. Remove the Runner Dome with a small Philips head screwdriver.

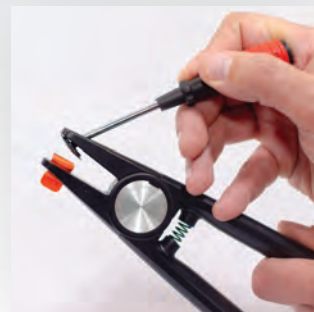

2. Hold The Runner shut, and unscrew Set Screw from the Arch through the access hole. Remove the Runner Arch to push out the Directional Knob with the Screwdriver.



3. Insert the new Directional Knob vertically into the Upper Jaw.



4. Pre-screw the Set Screw into the new Runner Arch.



5. Place the new Runner Arch on top of the Directional Knob, Close The Runner, and screw together through the access hole.



6. Test the Directional Knob's tension (Loosen the Set Screw by a quarter turn if the Directional Knob is too tight).



7. Apply a small amount of silicone glue to the bottom of the Runner Dome. Place the Runner Dome on the Lower Jaw and close to secure.



TECHNIGLASS

R.IN1.0826.R1

Techniglass Corporation
80 Thompson St,
North Tonawanda, NY 14120 USA

Phone: 716.525.1001
Email: info@techniglass.com
Website: www.techniglass.com