

HORIZONTAL COASTLINE INSTALLATION GUIDE

ISSUE 5



CONTENTS

1.	Pre-Installation	2
2.	Product suitability	5
3.	Building Regulations	5
4.	Storage and handling	5
5.	Fixing timber battens	6
6.	Window reveal trims	7
7.	Cut details	8
8.	Window head trim	8
9.	Starter bar	8
10.	External corner trims	9
11.	Internal corner trims	9
12.	Head trim	10
13.	End closer	10
14.	Butt joint	11
15.	End closer details	12
16.	Cladding board cut length	13
17-19	Cladding board fixing method	13
20.	Dormer roof side	15
21-24.	Final inspection, general maintenance and repairs	16
22.	Accreditation	17



BE SAFE WHEN WORKING AT HEIGHT

Ensure you conform to the latest Work at Height Regulations. For more details, visit:

www.hse.gov.uk/work-at-height

If in doubt at any stage

Please contact the customer services department.



0800 988 7309



customercare@deeplas.co.uk

PRE-INSTALLATION

1. PRE-INSTALLATION


PRE-INSTALLATION CHECK




- ▶ Coastline Cladding is designed for use on masonry buildings with a maximum height of 11m and must be installed at least 1 metre from boundaries.

Failure to install Coastline in accordance to these instructions will invalidate the Product Guarantee.


COMPONENTS

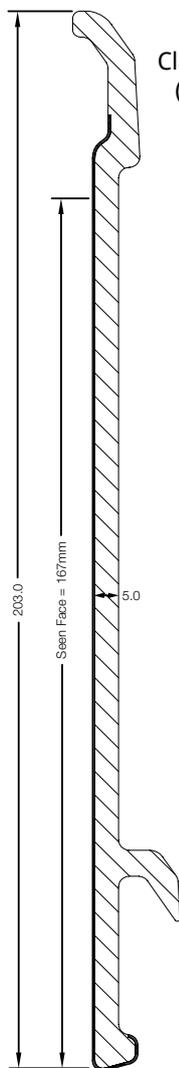


CL200
Cladding Board
(All Colours)

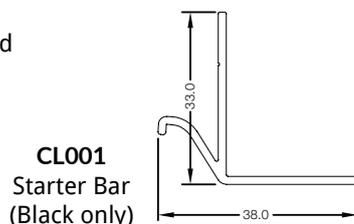


CL001
Starter Bar
(Black only)

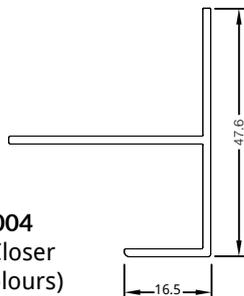


CL004
End Closer
(All Colours)

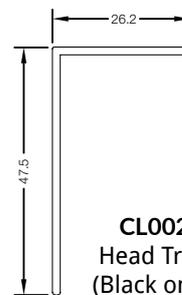


CL002
Head Trim
(Black only)

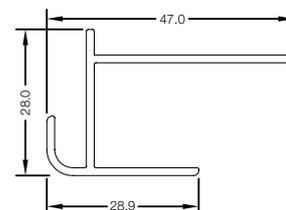


CL008
Window Reveal Corner
(All Colours)

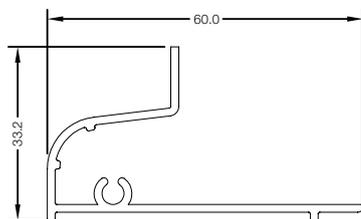

CL003
Window Head Trim
(All Colours)

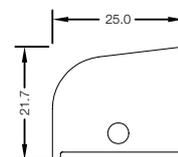







CL023
Window Head Trim
End Closer
(All Colours)

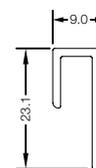

CL009
Window Reveal Trim
(All Colours)

The Coastline cladding board, and profiles are 5 metres long.
(Excluding these end closers; CL023, CL025, and CL026).

COMPONENTS

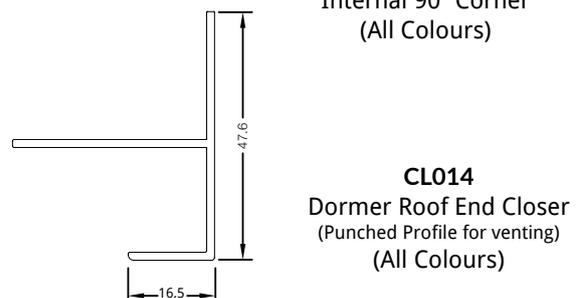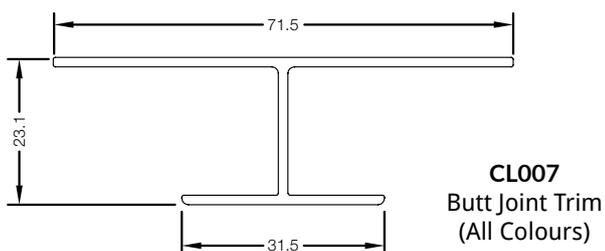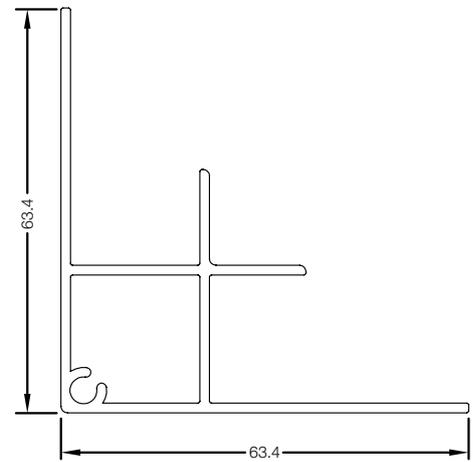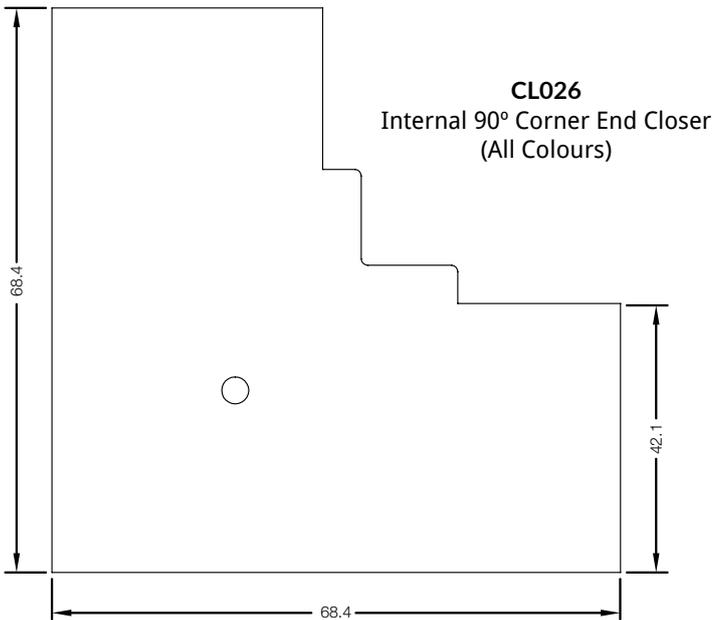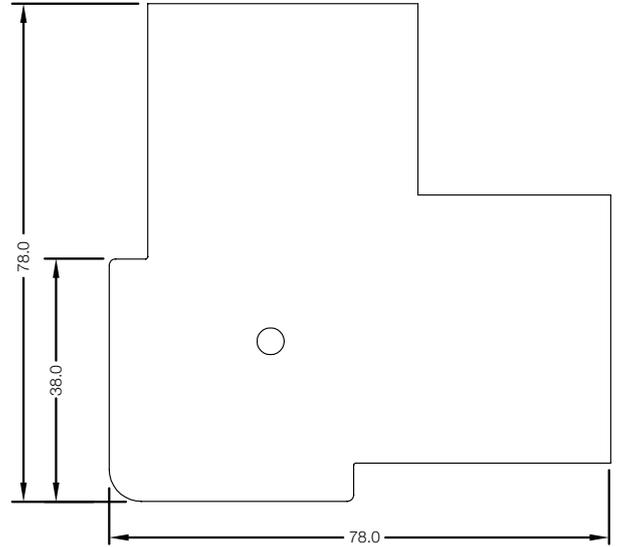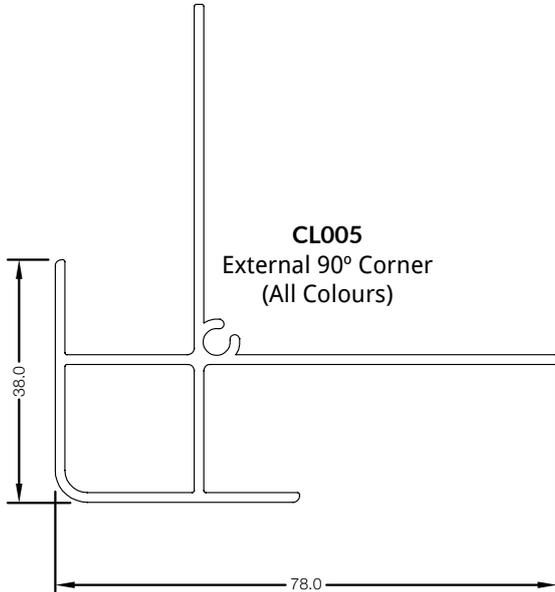

The Coastline cladding board, and profiles are 5 metres long.
(Excluding these end closers; CL023, CL025, and CL026).

COASTLINE CLADDING BOARD COVERAGE

Each Horizontal Coastline cladding board has a seen face of 167mm height. Each 5m board will give approximately. 0.84m² (167mm x 5000mm) so each pack of 4 = 3.334m² coverage approximately.

These dimensions serve as a guide and will differ due to the amount of apertures within the wall construction.

COASTLINE CLADDING ANCILLARIES

Available from 200+ Eurocell branches nationwide. For your local branch, visit eurocell.co.uk/branch-finder.

Silicone		
CODE	COLOUR	RAL CODE
SILIRUBCOLOROW	OYSTER WHITE	RAL1013
SILIRUBCOLORBG	BEIGE GREY	RAL 7006
SILIRUBCOLORPG	PEBBLE GREY	RAL 7032
SILIRUBCOLORPB	PIGEON BLUE	RAL 5014
SILIRUBCOLORGY3	WINDOW GREY	RAL 7040
SILI2ANGY	ANTHRACITE GREY	RAL 7016

Touch Up Pens	
CODE	COLOUR
EWS701GR7016	ANTHRACITE GREY
EWS701GR7155	MOONDUST GREY
EWS701PB	PIGEON BLUE
EWS701OW	OYSTER WHITE
EWS701SG	SOFT GREEN
EWS701TP	TAUPE

Fixing Nails		
CODE	DESCRIPTION	SIZE
CL090	COASTLINE FIXING NAILS (A4 316 STAINLESS STEEL)	3mm x 25mm x 7.5mm

COASTLINE CLADDING

Cladding		
CODE	COLOUR	RAL CODE
CL200GY1	ANTHRACITE GREY GY1	RAL 7016
CL200TP	TAUPE TP	RAL 7006
CL200PB	PIGEON BLUE PB	RAL 5014
CL200SG	SOFT GREEN SG	RAL 7032
CL200GY3	MOONDUST GREY GY3	RAL 7040
CL200OW	OYSTER OW	RAL 1013

2. PRODUCT SUITABILITY

Coastline Cladding is designed for use on **masonry buildings with a maximum height of 11m and must be installed at least 1 metre from boundaries**. It should not be fitted to higher buildings, timber buildings or steel construction dwellings, all product guarantees will be invalidated should this occur. Coastline Cladding can be fitted to garden buildings which are not habitable dwellings for living 24/7.

Horizontal Coastline Cladding has been fire tested to EN 13823 & EN 11925 to obtain classification to BS EN 13501-1. It has achieved a European Classification of D-S3,d2.

Coastline Cladding is suitable for use in a Northern European Climate only.

Note: Installation in areas outside of Northern European Climates will invalidate the Product Guarantee.

Coastline Composite Cladding needs to be fitted as outlined within this installation guide. Non adherence to these instructions, and good fitting practices will invalidate the product guarantee. Correct use of all Coastline components, and sundries is also required, use of modified or non specified components will invalidate the Product Guarantee.

3. BUILDING REGULATIONS

The four geographic regions to which the Building Regulations apply, namely England, Wales, Scotland and Northern Ireland, each have their own provision for achieving an acceptable standard of fire protection. Building Regulations in the UK apply to most new buildings and many refurbishments of existing

structures and compliance to all aspects, including fire regulations, is a legal requirement. **Combustible systems less than 11m in height and greater than 1 metre from a boundary require no special fire provisions.**


4. STORAGE AND HANDLING

- ▶ Coastline cladding boards and aluminum trims must be stored under cover, ideally indoors and away from direct sunlight
- ▶ Profiles should be stocked and transported horizontally
- ▶ Ensure profiles are secured during transportation to avoid scratching

- ▶ Coastline cladding boards should be lifted from the stack rather than dragged as this can result in damage to the surface finish
- ▶ When carrying the cladding boards, hold the edges vertically to avoid bending the board
- ▶ Do not drag the aluminum sections from the stillage as this could scratch the powder coat finish

5. FIXING TIMBER BATTENS

5.0

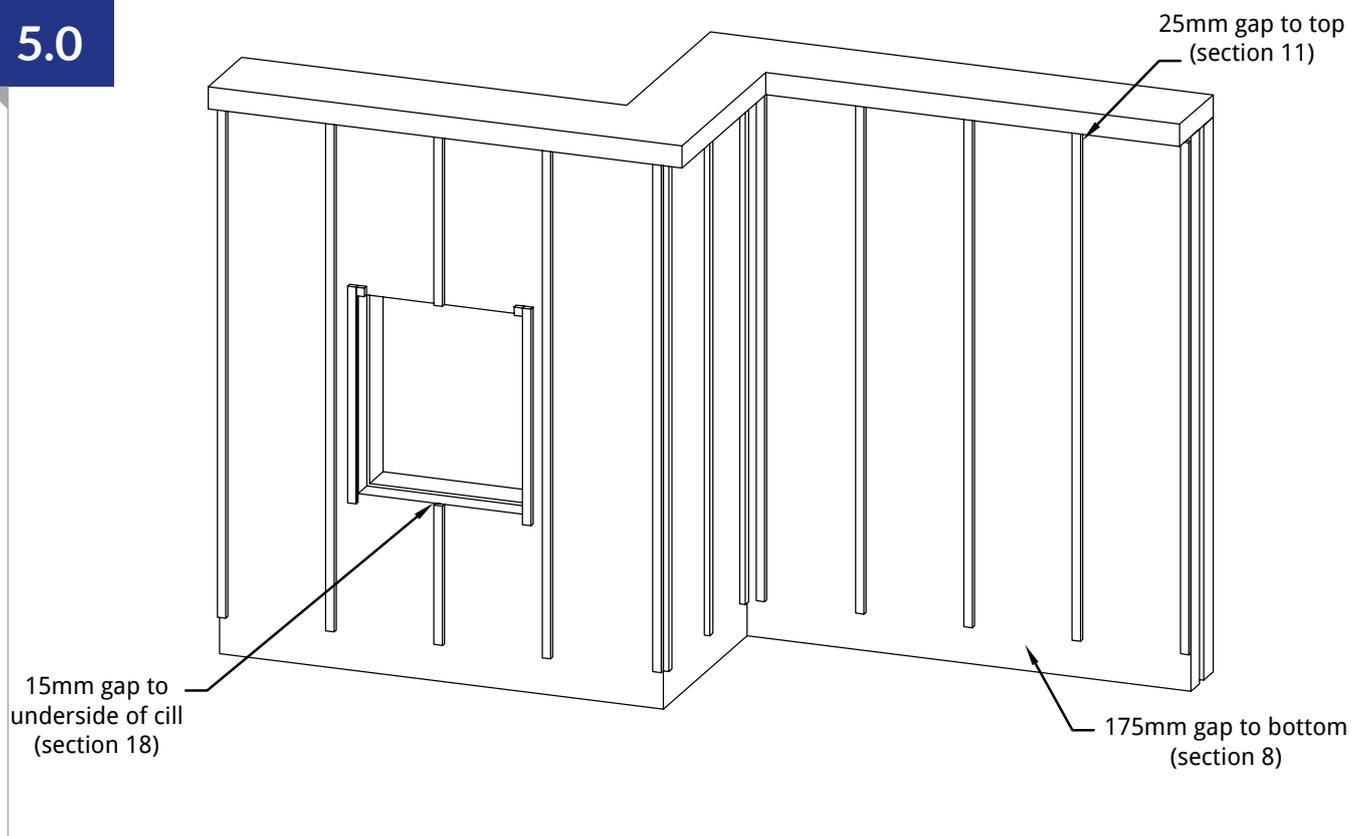

Position and fix the timber battens (38mm x 25mm) to the wall using stainless steel screws. Battens to run vertically starting at a minimum of 175mm from the bottom of the brickwork. Batten centres to be spaced at a maximum 500mm apart. The battens must finish 25mm short of the underside of a soffit and 15mm short of the underside of a window cill. (Refer to sections 8, 11 & 18 for more details).

two Timber battens are required side by side where a Butt Joint (option 1 CL007) is located, this is to allow the butt joint to be fixed to the timbers correctly. For butt joint option 2 use single batten. (Refer to sections 13 & 14).

On the head of a window a small piece of timber batten may be required to fix the head trim to, this is dependent on how many battens run above the window. The window head trim must be fixed no more than 100mm from each end.

PRE-INSTALLATION CHECK


- ▶ Coastline cladding is designed for use on masonry buildings with a maximum height of 11m and installed at least 1m from boundaries.

Failure to install Coastline in accordance to these instructions will invalidate the Product Guarantee.



6. WINDOW REVEAL TRIMS

6.0

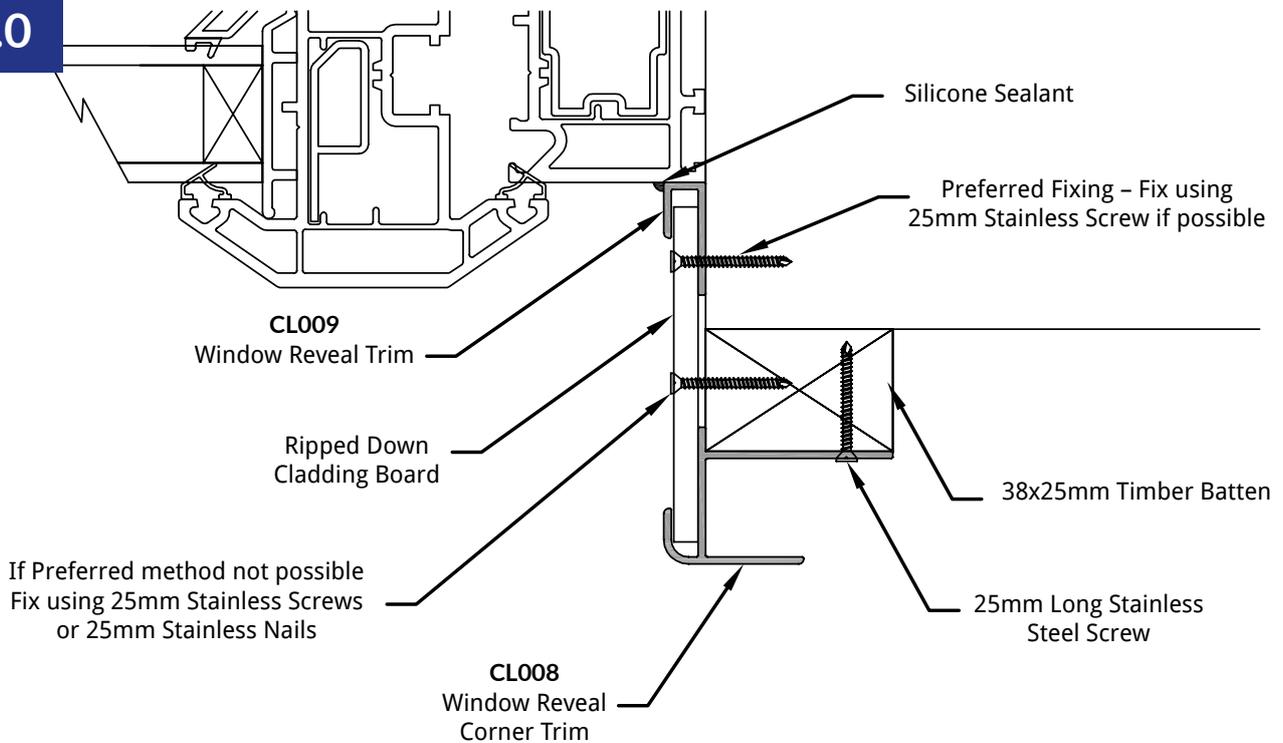

The Window Reveal Trims (CL008 & CL009) and Window Head Trims (CL003) need to be fitted before installation of the Cladding Board begins. This is to allow the trims to be fixed correctly.

Cut down a Cladding Board (CL200) to fit the window reveals, leaving a 5mm flat board section to fit within the trims.

Fix the Window Reveal Trim (CL009) first with the board in position, then position the Window Reveal Corner (CL008) and fix into the timber batten.

PRE-INSTALLATION CHECK

- ▶ Coastline cladding is designed for use on masonry buildings with a maximum height of 11m and installed at least 1m from boundaries.


Failure to install Coastline in accordance to these instructions will invalidate the Product Guarantee.



NOTE: Coastline cladding is designed for use on masonry buildings with a maximum height of 11m and installed at least 1m from boundaries.

7. CUT DETAILS


7.0

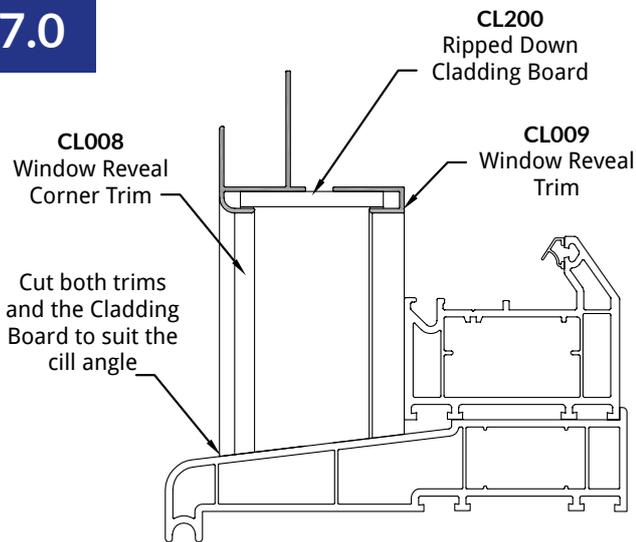

The Window Reveal Trims (CL008 & CL009) and the Cladding Board (CL200) will need cutting to suit the angle of the cill, this angle is dependent of the window which has been fitted and will vary from window to window.

8. WINDOW HEAD TRIM


8.0

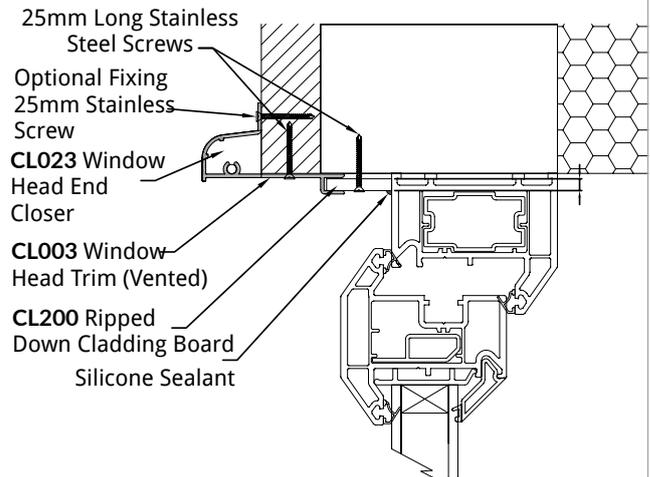

Cut down a section of Cladding Board to the required size. Position the board into the Window Head Trim (CL003) and fix head trim up into the timber battens using 25mm stainless screws. Once in position fix the board up into the brickwork and seal the end with a silicone sealant. (See page 12 for instructions on CL023 head end closer).

9. STARTER BAR

9.0

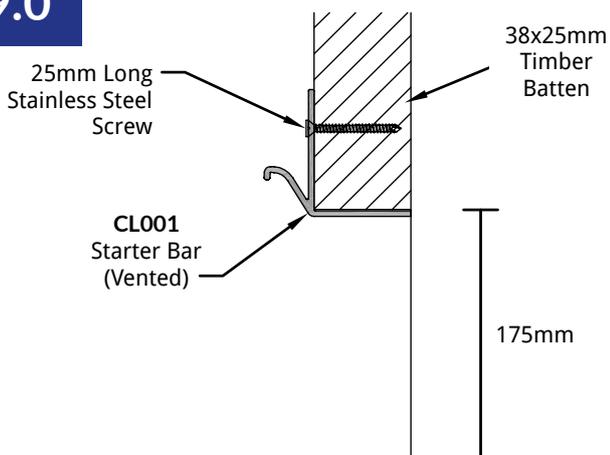


Once the window reveals have been completed fit the Starter Bar (CL001) to the bottom of the timbers, fix back to each batten as shown using 25mm stainless steel screws.

Note: All trims require fitting before the Cladding Board can be fitted to allow correct fixing of the trims.


10. EXTERNAL CORNER TRIMS

10.0

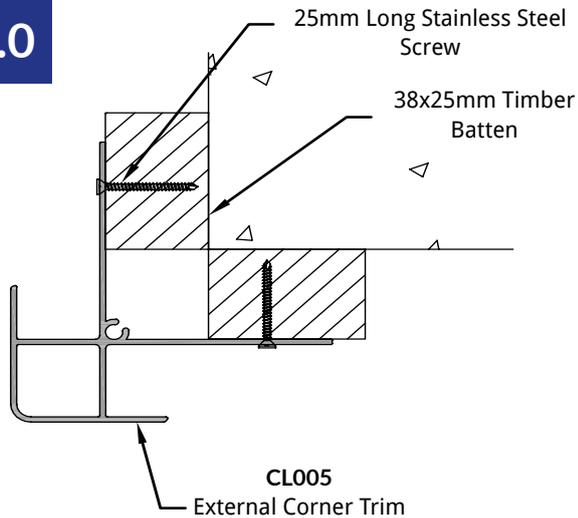

Fit corner trims to all Internal (CL006) and External Corners (CL005) as shown fixing with 25mm stainless steel screws at 300mm centres. The Corner Trims must pass beyond the bottom of the first Cladding Board when fitted, the Corner Trims should run 25mm past the bottom of the Starter Bar (CL001).


10.1

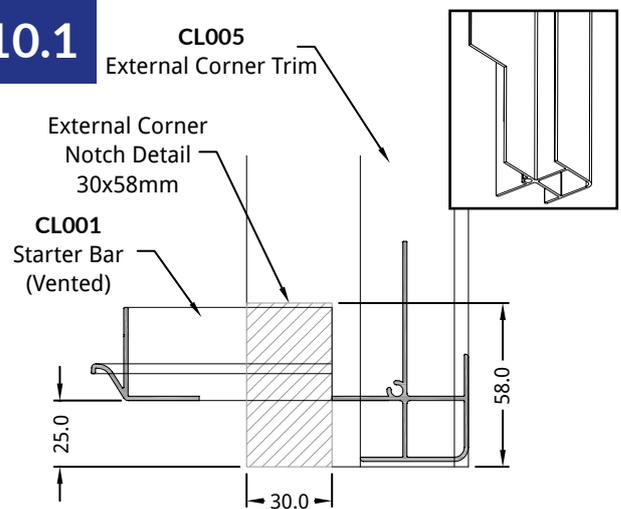

Notching Details:- To allow the Starter Bar (CL001) to run full length, notching is required on External Corner Trims (CL005). Cut away the section shown below.


11. INTERNAL CORNER TRIM

11.0

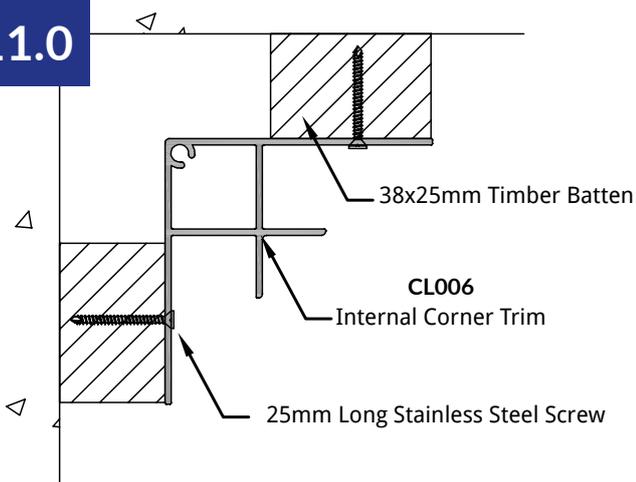

Fit corner trims to all Internal (CL006) and External Corners (CL005) as shown fixing with 25mm stainless steel screws at 300mm centres. The Corner Trims must pass beyond the bottom of the first Cladding Board when fitted, the Corner Trims should run 25mm past the bottom of the Starter Bar (CL001).

11.1

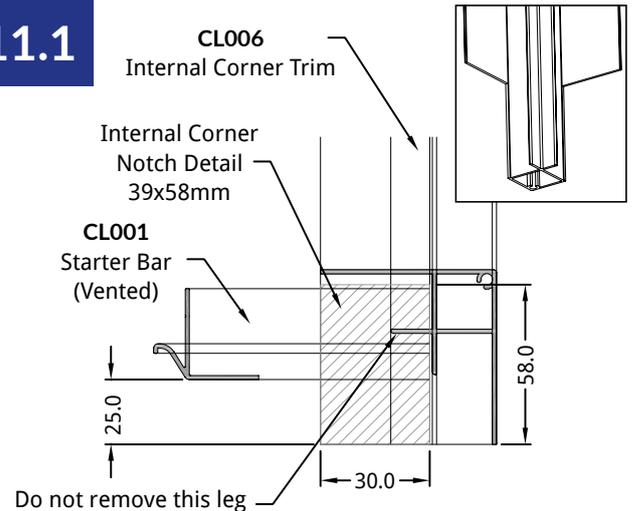


Notching Details:- To allow the Starter Bar (CL001) to run full length, notching is required on the Internal (CL006) Corner Trims. Cut away the section shown below.

NOTE: Coastline cladding is designed for use on masonry buildings with a maximum height of 11m and installed at least 1m from boundaries.

12. HEAD TRIM


12.0

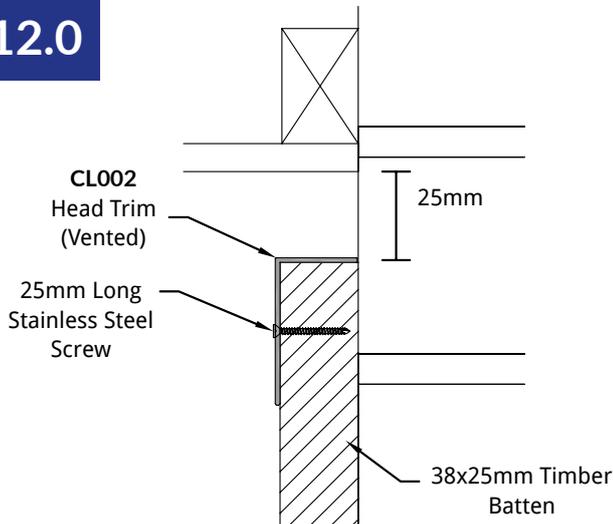

Fix Head Trim (CL002) to the top of the timber battens using 25mm stainless steel screws, fixing at each vertical timber batten.


13. END CLOSER

13.0

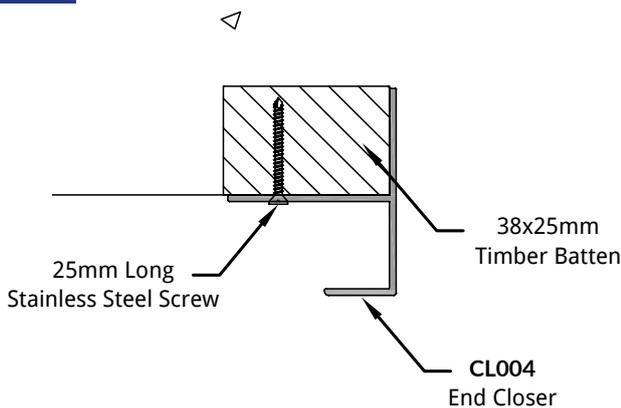

Locate the End Closer (CL004) onto the timber batten, fix using 25mm stainless steel screws. The End Closer (CL004) must be long enough to pass beyond the bottom of the first Cladding Board when fitted, the End Closer (CL004) should run 25mm past the bottom of the Starter Bar (CL001).


13.1

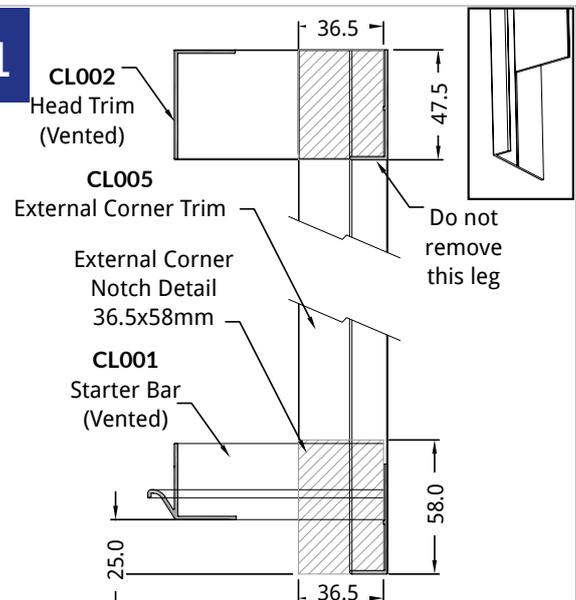

End Closer Notching Details:- To allow the Starter Bar (CL001) and Head Trim (CL002) to run full length, notching is required on the End Closer (CL004)

14. BUTT JOINT (with Aluminium Trim)

14.0

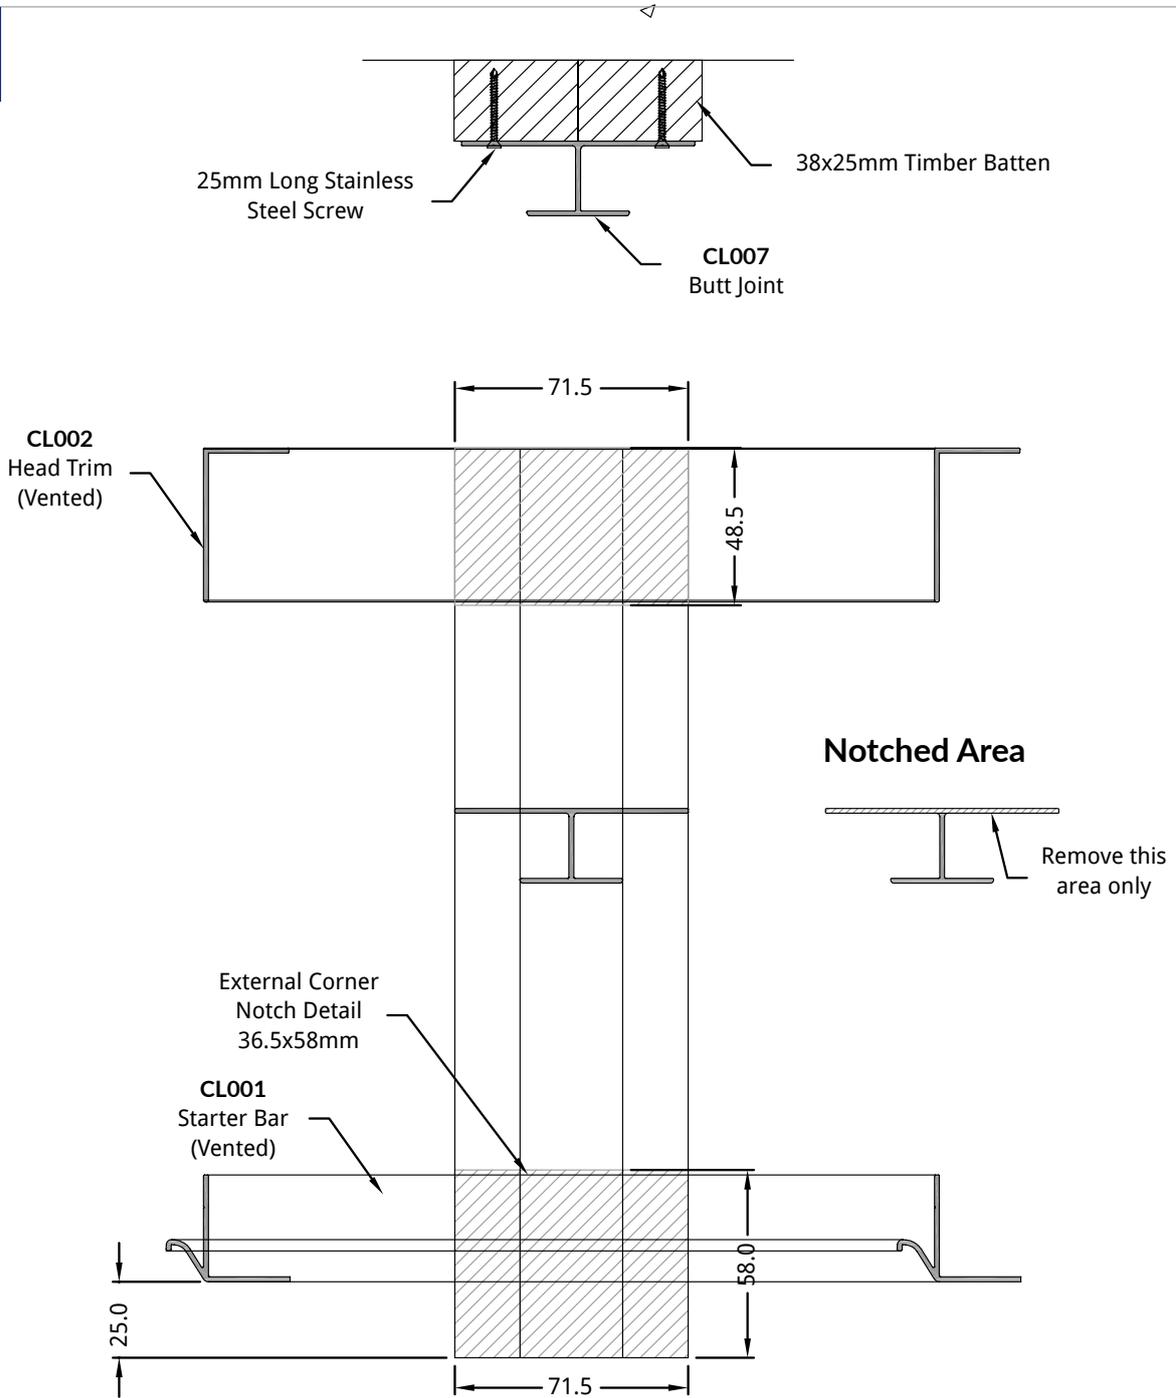


Where a butt joint is required, two vertical timbers are required to allow the butt joint to be fixed. Using stainless steel screws fix at 300mm centres. For the Butt Joint (CL007) to run full length the back section of the trim must be notched out where the Starter Bar (CL001) and Head Trim (CL002) run through.

NOTE: Coastline cladding is designed for use on masonry buildings with a maximum height of 11m and installed at least 1m from boundaries.

15. END CLOSER DETAILS


15.0

CL005
External Corner Trim

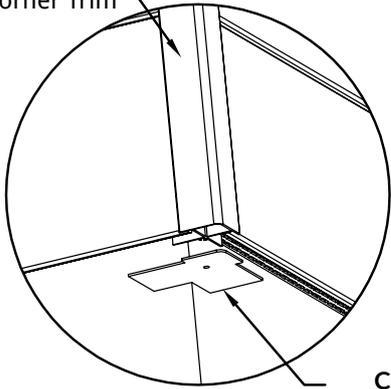

CL025
External Corner Trim
End Closer

CL006
Internal Corner Trim

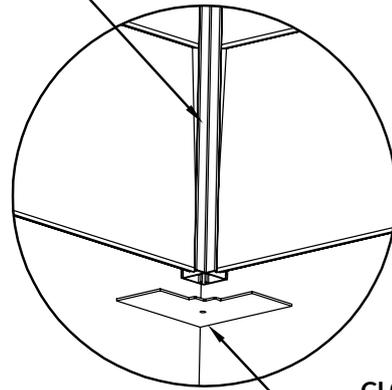


CL026
Internal Corner Trim
End Closer

Where Internal and External Corner Trims (CL005 & CL006) are used, screwported End Closers (CL025 & CL026) are available. These are to be fitted by offering up to the end of the corner trim and screwing into the screw port in the aluminum extrusion.

15.1

CL023
Window Head Trim
End Closer


CL003
Window Head Trim

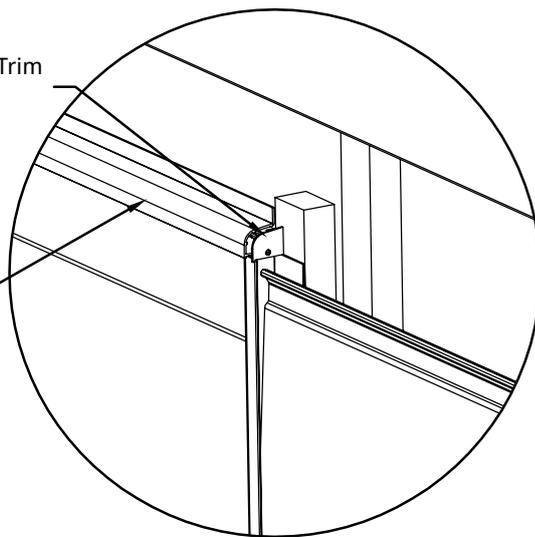

Window Head Trims (CL003) require to be capped off to create a neater finish, Window Head Trim End Closers (CL023) are available. Fix the End Closer to the Window Head Trim by screwing through the End Closer into the screw port in the aluminum extrusion using 4.5x16 pan head screws. (Touch up pens can be used to colour the screw ends where they will not be covered by boards).

16. CLADDING BOARD CUT LENGTH


16.0

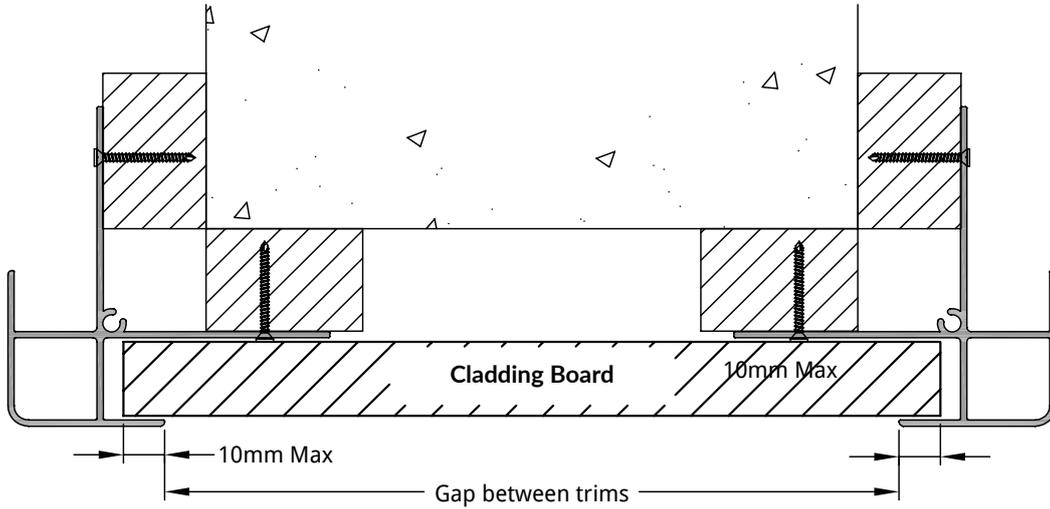

The Cladding Board cut length should be a maximum of 20mm longer (10mm per side) than the gap between the aluminium trims. Shorter board lengths may require the 10mm per side to be reduced to ease fitting and enable the board to shuffle into position rather than bend.


17. CLADDING BOARD FIXING METHOD

17.0

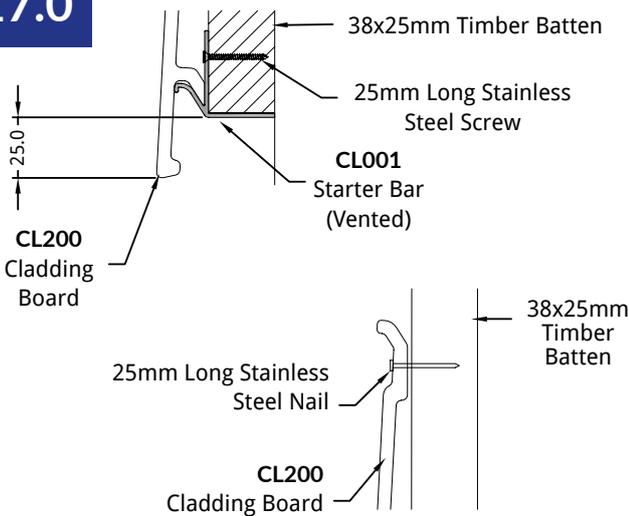

To begin the installation of the coastline cladding boards, locate the first board onto the Starter Bar (CL001), fixing at the top using 25mm stainless steel nails fixing back to each timber batten (max 500mm centres).

17.1

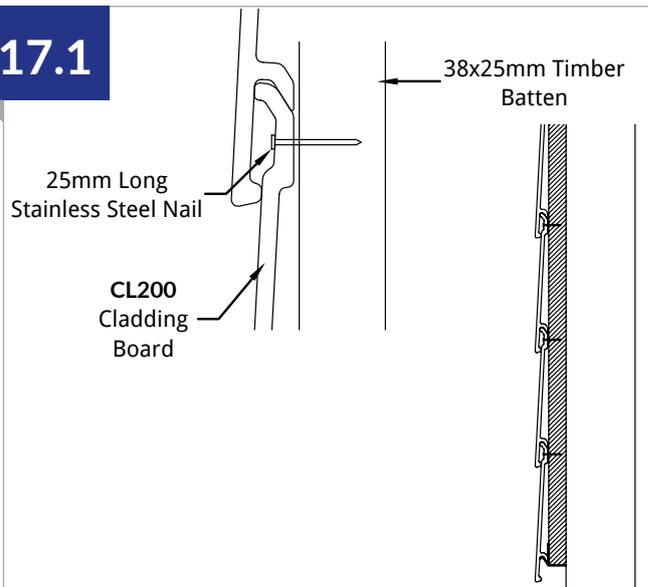

Once secure stack the next Cladding Board by hooking over the top lip which hides the fixings, as before fix back to the timbers through the top section of the Cladding Board. Continue this method until the cladding is complete.


NOTE: Coastline cladding is designed for use on masonry buildings with a maximum height of 11m and installed at least 1m from boundaries.

18. CLADDING BOARD FIXING METHOD (Around Windows)

18.0

UNDER WINDOW


OVER WINDOW

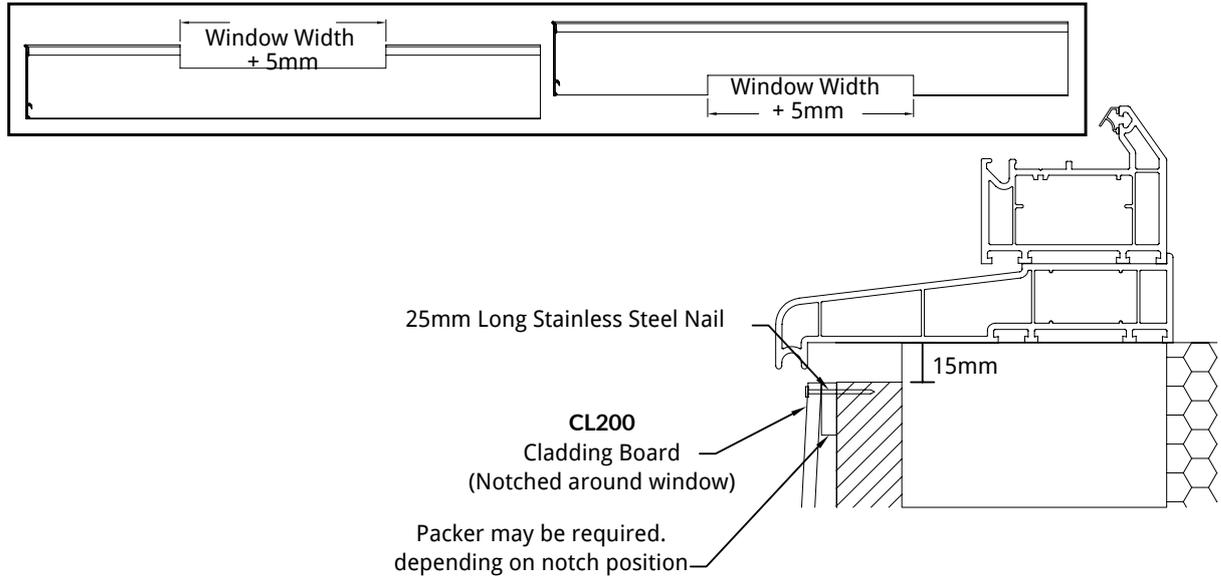

If cladding runs around a window, boards may need notching around the window at both the top and bottom. The size of the notch is dependent on the window size and where the stacked boards locate. Overleaf is an example of possible notching details for both over and under the window. A packer may be required behind the notched board to aid fixing.

19. CLADDING BOARD FIXING METHOD

19.0

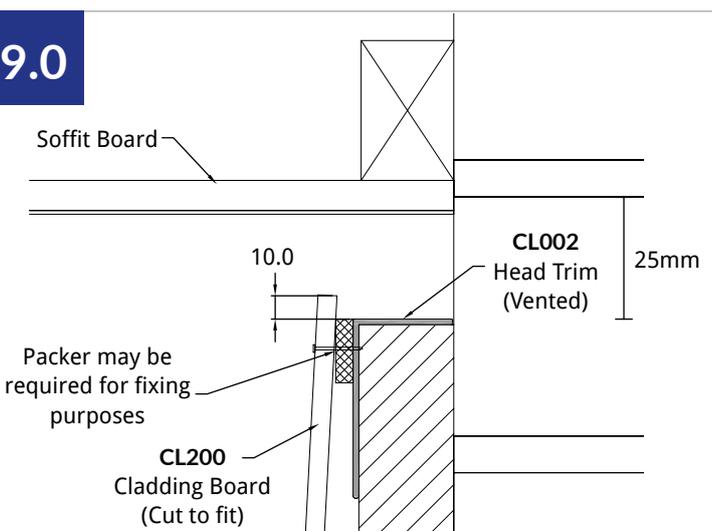


When fixing the final Cladding Boards at the top, run the board 10mm beyond the top of the timber. Depending upon how the board has been cut down to fit, a packer may be required to support the board when fixing.

20. DORMER ROOF SIDE


20.0

Fit timber battens to the dormer side at least 25mm up from the pitched roof. Once the battens are in position, fit Dormer Starter Bar (CL014) to the bottom of the battens.

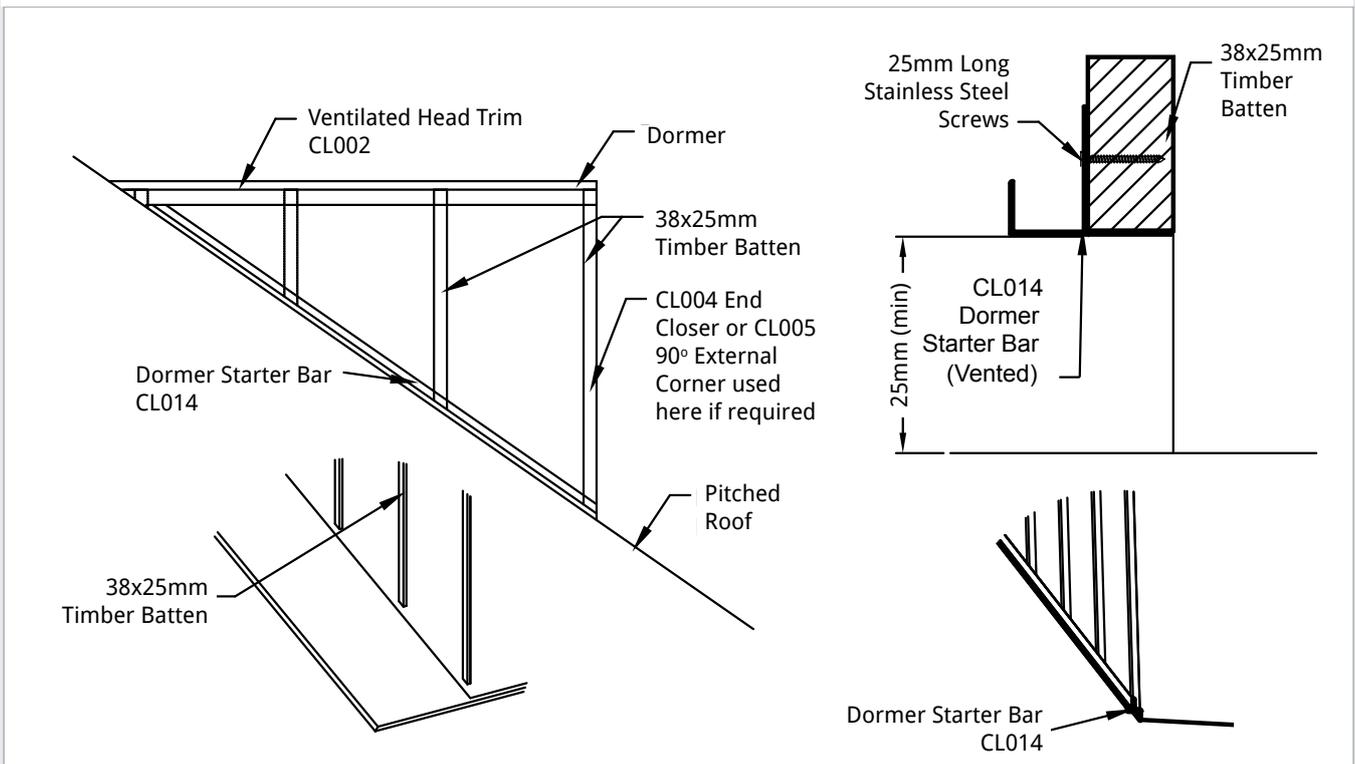


20.1

Now fit Ventilated Head Trim (CL002) Dormer Starter Bar CL014 and End Closer or External Corner Trim (If required). Then secure the first panel as shown.

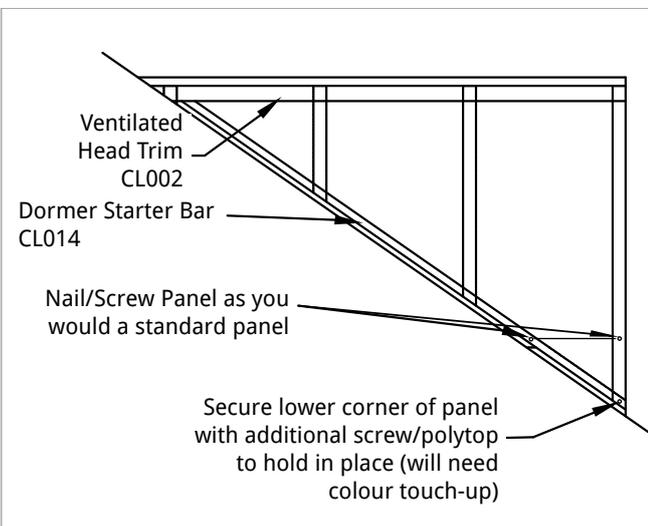

20.2

Secure all remaining panels.

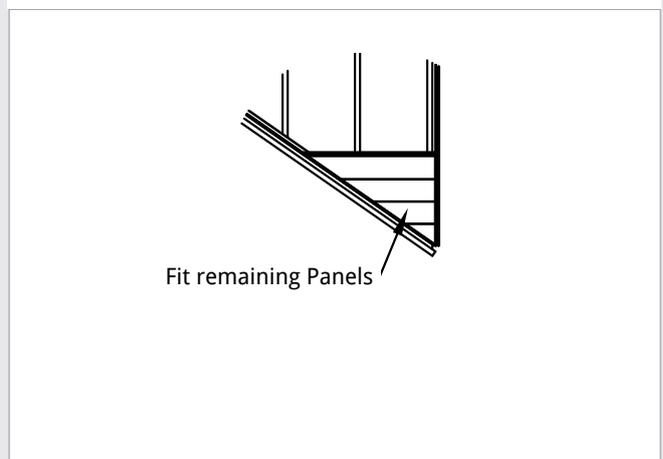

Note: All trims require fitting before the cladding plank can be fitted to allow correct fixing of the trims.

NOTE: Coastline cladding is designed for use on masonry buildings with a maximum height of 11m and installed at least 1m from boundaries.

21. FINAL INSPECTION - THINGS TO LOOK FOR

Check that appropriate trims have been used in the correct location. Check that adequate expansion and contraction tolerances have been observed. (4/5mm at each board end). Ensure fixing centres are correct. Check for the air space behind the cladding. No obstructions should exist behind the cladding system e.g. thermal insulation fixed behind the system. Check that correct fixings have been used to fix the cladding profiles. For e.g. 25mm x 2.65mm gauge (A4 grade) stainless steel nails at each intersection. Check that all joints have been planned to give a neat symmetrical and balanced appearance and are made over support battening. Ensure window intersections are watertight and trimming has been completed neatly.

23. SURFACE REPAIR

Prior to surface repair advice should be sought from the manufacturer regarding continuity of guarantees.

Coastline Boards are designed to be a 'through colour' product therefore minor scratches or scores should not be visible, however colour matched touch up pens and silicone sealants are available from the point of purchase should any cosmetic repairs be required to trims and joints.

22. GENERAL MAINTENANCE

Coastline profiles are self-finished and low maintenance. Occasional washing with a non-abrasive mild detergent and water is beneficial in removing surface grime and maintaining a pristine appearance, especially in heavily polluted atmospheres.

Solvents should not be used under any circumstances for cleaning.

Exercise care to prevent contact with, and staining by creosote or bitumen-based products.

Many common building materials can be easily cleaned off without damage.

24. BOARD REPLACEMENT PROCEDURES

Replacement of a single board can be achieved; alternatively removal of the affected boards may require removal of trims and nails in and around the area of damage. Check battens, waterproof breathable membrane, and substrate and repair as necessary.

PRE-INSTALLATION CHECK

- ▶ Coastline cladding is designed for use on masonry buildings with a maximum height of 11m and installed at least 1m from boundaries.



Failure to install Coastline in accordance to these instructions will invalidate the Product Guarantee.

24. ACCREDITATION

 0833
Eurocell Profiles Limited High View Road Alfreton, Derbyshire DE55 2DT UK 18 Eurocell Coastline Cladding

 0833
Eurocell Profiles Limited High View Road Alfreton, Derbyshire DE55 2DT UK 18 Eurocell Coastline Cladding

EN13245-2:2008 PVC-UE profile for the external wall/ceiling finishes	
Reaction to fire (Class + indication of mounting & fixing method)	D-s3, d2/AHM
Release of dangerous substances	NONE
Mechanical resistance (Impact resistance code)	23.01
Resistance to fixing (Impact resistance code)	NPD
Durability (Tensile impact resistance code)	A.2

NOTE: Coastline cladding is designed for use on masonry buildings with a maximum height of 11m and installed at least 1m from boundaries.

**Full
product
range**



Deeplas Roofline



**Coastline Lightweight
Composite Cladding**



**Equinox Tiled Roof
System**




Skypod Lantern Roofs



**Twinson Premium
Cladding**



**Internal Wall
and Ceiling Panels**

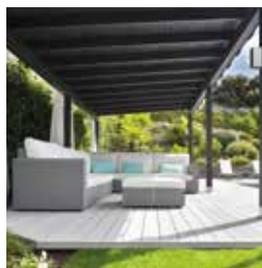

Twinson Decking



Roomline PVC-U Skirting



**Deeplas Embossed
Cladding**



**Slateskin GRP
Sheet Tile System**



**Deeplas Window
Boards**



Rainwater



Shower Panels



Garden Rooms

Customer service

If you need any assistance, please call the Customer Services team on the following number or visit deeplas.co.uk



0800 988 7309